

UNIVERSAL BOAT LIFTS, LLC


Installation tips PE-950 & PE-1500



Track should be plumb and pulled slightly back. If necessary, you may use only one clip below the dock to pull the track slightly back. Or, you may shim between clip and track.



Secure track to pole with mounting clip and bolt as shown. Do not use clips if installing on flat surface. ie, 6 X 6

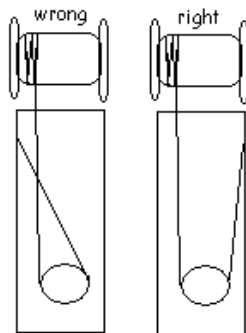

Remove blue pulley and place cable under it.



